

# Utility Thresholds

## INSTALLATION INSTRUCTIONS

- 1 Measure and cut threshold to size as required.
- 2 Notch as necessary, to suit door frame.
- 3 Caulk underneath and around edges of threshold for moisture control.
- 4 Attach threshold to floor surface with screws provided.



### ZERO INTERNATIONAL, INC.

415 Concord Avenue, Bronx, NY 10455-1004

Tel : 718-585-3230 • Fax : 718-292-2243

E-mail : [zero@zerointernational.com](mailto:zero@zerointernational.com)

[www.zerointernational.com](http://www.zerointernational.com)

### Suggested Installation

